

**Hardware Installation**

Note: Supports Windows 7/Vista/XP

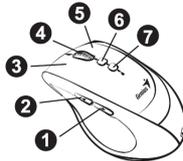
1. Connect the Micro USB charging cable to the mouse and any PC USB port.
2. You can connect the receiver to a USB port of a PC.
3. In charging mode, the RED LED light will be on and off when charged.
4. Make sure that you have switched on the power switch underneath the mouse.

**Remark:**

It takes around five minutes to charge up the capacitor and you can use the mouse for about four hours. Actual performance varies according to the conditions.

**Software Installation**

1. Place CD into CD/DVD-Rom drive.
2. Follow the instruction on the screen to complete software setup.
3. Restart your PC.

**Factory Settings**

1. **Previous Page:** Go to last page of Internet Explorer
2. **Next Page:** Go to next page of Internet Explorer
3. **Left Button:** Provides traditional mouse functions like click, double click and drag.
4. **Magic-Roller:** Press the "Magic-Roller" to surf the Internet and Windows documents.
5. **Right Button:** Provides traditional mouse click functions.
6. **DPI adjustment:** Default is 1600 dpi, press once for 800 dpi. Quick red flashing is 1600 dpi and slow red flashing is 800 dpi.
7. **Flying Scroll:** Press and hold to move vertically or horizontally for 4-way scrolling.

**Capacitor low indication**

If the LED is flashing, then the capacitor level is low, you need to recharge the mouse immediately.

**Warning: (Troubleshooting)**

1. Do not use the wireless optical/laser mouse on a desk which is made of glass or mirror.
2. The connection of the wireless device is **factory preset**, so when you plug the USB receiver into any USB port, the connection between the micro receiver and the mouse **will be established automatically**.
3. In case your PC did not install the hardware successfully, remove the micro receiver from the USB port and go **Human Interface Devices** under **Device Manager** to remove the mouse then plug in the micro receiver to a USB port again.
4. If you feel the mouse does not move smooth as usual, it is possible the batteries have lost their charge so you need to replace them. Remember to put the batteries in the correct direction.
5. Keep the mouse away from heat in order to prevent damage to the capacitor.